Jon Mick eghry

M-129E

PROGRAMMING MANUAL

FOR THE

SERIES I CNC

MILLING, DRILLING & BORING MACHINE

WITH

BOSS 4.0, and BOSS 5.0, or 6.0 SOFTWARE

This manual provides information which is proprietary to Bridgeport Machines and is made available to you for the use and maintenance of our products. Any use, reproduction, or dissemination of this information for any other purpose is prohibited without written permission.

This manual carries additional safety precautions and warnings. Read and observe the requirements of the preface and the entire procedures contained in this manual.

January 1981



TABLE OF CONTENTS

Section	<u>1</u>		Page	
	LIST	F OF ILLUSTRATIONS	iii	
	SAFI	ETY NOTICE	v	
I	SERI	SERIES I CNC SPECIFICATIONS		
	1.1 1.2 1.3 1.4	Features of Bridgeport Series I CNC Features of Bridgeport CNC Control System	1-1 1-3 1-3 1-4 1-5	
II	PROGRAMMING FORMAT SUMMARY		2-1	
	2.1 2.2 2.3	Letter Addresses	2-1 2-1 2-2	
Ш	TOOLS AND METHODS CONSIDERATIONS		3-1	
	3.1 3.2 3.3	Tool Holders	3-1 3-10 3-20	
IV	CONTROL TAPE FORMAT DETAILS		4-1	
	4.1 4.2 4.3	The Coordinate Systems Tape Description Programming Form	4-1 4-3 4-8	
V	PROGRAM ENTRIES DESCRIPTIONS			
	5.1 5.2 5.3 5.4 5.5 5.6 5.7 5.8 5.9 5.10 5.11		5-1 5-2 5-2 5-27 5-29 5-33 5-35 5-35 5-37	

TABLE OF CONTENTS (CONTINUED)

Section			Page
VI	REPETITIVE PROGRAMMING		6-1
	6.1 6.2 6.3	Looping Macro Sub-routines Repetitive Programming Examples	6-1 6-5 6-9
VII	PROGRAMMING EXAMPLE		7-1
	7.1 7.2	Engineering Programming	7-1 7-1
VIII	OPTIONAL EQUIPMENT		8-1
	8.1 8.2 8.3	Tape Reader Rotary Table with BOSS 4 and BOSS 5 Systems Rotary Table Programming with Boss 6 System	8-1 8-3 8-6
IX	BRIDGEPORT OPERATING SYSTEM SOFTWARE 5.0 and 6 9-1		
	9.1 9.2 9.3 9.4 9.5		9-1 9-2 9-3 9-19 9-25
APPENDI	ΧA	PROGRAMMING FEATURES - BOSS 4	A-1
APPENDI	ХВ	GLOSSARY	B-1
APPENDI	хс	INTRODUCTION TO TRIGONOMETRY	C-1

LIST OF ILLUSTRATIONS

Figure		Page
1-1	The Series I CNC	1-2
1-2	Operator's Control Panel	1-8
3-1	Identity of Twist Drill Features	3-1
3-2	Twist Drills	3-2
3-3	Subland and Spade Drills	3-2
3-4	Spot Drills	3-3
3-5	Geometry at Hole Location	3-3
3-6	Drill Point	3-4
3-7	Machine Taps	3-4
3-8	Removing Legend	3-6
3-9	End Mills	3-7
3-10	Computer-Assisted Program Input Listing	3-8
3-11	Boring with End Mill	3-9
3-12	Tool Deflection	3-10
3-13	Typical Tool and Tool Holder	3-11
3-14	Tool Description and Presetting Data	3-13
3-15	Tool Setting Drawing	3-14
3-16	Tool Length Differences	3-15
3-17	Tool Length Offset Controls	3-16
3-18	Preset	3-17
3-19	Measuring Actual Preset	3-17
3-20	Tool Setting Drawings	3-18
3-21	Tool Setting Data, F-127	3-19
3-22	Tool Length Offset	3-21
3-23	Machine Data Summary, F-114	3-25
4-1	Machine Coordinate System	4-2
4-2	Translating the Z Coordinates	4-4
4-3	One Inch Perforated Tape	4-5
4-4	Input Tape and Program Text Codes	4-7
4-5	Programming Form	4-9
5-1	CW or CCW in Switchable Planes	5-6
5-2	Drilling Cycle	5-13
5-3	Spotfacing Cycle	5-13
5-4	Deep Hole Drilling Cycles	5-15
5−5	Tapping Cycle	5-15
5~6	Feed and Speed Chart for Tapping	5-17
5-7	Boring Cycle	5-19 5-19
5-8	Boring Cycle	5-19 5-19
5-9	Boring Cycle	5-19 5-23
5-10	Translation of Part Coordinates	5-23 5-31
5-11	Arc Offsets	5-36
5-12	Spindle Drive HP vs Speed Characteristics	5-30 5-40
5-13	Cover Plate	5-40 5-42
5_14	Cover Plate N/C Lavout	J- 42

LIST OF ILLUSTRATIONS (CONTINUED)

Figure		Page
5-15	Completed Program Manuscript	5-44
6-1	Nested Loop Example (Sheet 1 of 2)	6-9
6-1	Nested Loop Example (Sheet 2 of 2)	6-10
6–2	Macro Call Within a Loop, Within a Loop, Within a Macro (Sheet 1 of 2)	6-11
6-2	Macro Call Within a Loop, Within a Loop, Within a Macro (Sheet 2 of 2)	6-12
7-1	Drawing a Plate 3673653	7-2
7-2	Plate 3673653 - Presetting Data	7-3
7-3	Plate 3673653 - Tool Setting Data	7-4
7-4	Plate 3673653 - Machining Data	7-5
7-5	Set-up Instructions	7-15
7-6	Sample Program (Sheet 1 of 2)	7-16
7-6	Sample Program (Sheet 2 of 2)	7-17
8-1	General Arrangement Rotary Table	8-4
9-1	Programming Commands for Cutter Compensation	9-5
9-2	Tool Setting Data	9-13
9-3	Cam Track	9-24
9-4	Rotor, Geneva Mechanism	9-26
9-5	Plate (Sheet 1 of 2)	9-29
9-5	Plate (Sheet 2 of 2)	9-30

IMPORTANT

SAFETY INFORMATION

To prevent serious bodily injury, you should observe the following basic safety precautions when installing, operating or servicing your Bridgeport milling machine.

- 1. Follow all instructions in the machine manual.
- 2. Wear approved industrial safety glasses and safety shoes.
- 3. Do not wear gloves, long sleeves, long hair, rings, watches, jewelry or other loose items that could become caught in moving parts.
- 4. Keep all parts of your body away from moving parts (belts, cutters, gears, etc.)
- 5. Use proper point of operation safeguarding.

These and other safety precautions are discussed in the American National Standards Institute Standard entitled Safety Requirements for the Construction, Care, and Use of Drilling, Milling, and Boring Machines (ANSI B11.8-1974).

This publication is available from: The American National Standards Institute

1430 Broadway

New York, New York 10018

Safeguarding for protection at the point of operation can only be designed and constructed when the parameters of the particular operation have been determined. As a result, ANSI B11.8-1974, Section 5.1, states that "it shall be the responsibility of the employer to provide, and ensure the use of, a guard, quarding device, awareness barrier, awareness device, or shield...".

To assist machine users in designing point of operation safeguarding for their specific machine applications, the Occupational Safety and Health Administration has published a booklet entitled Concepts and Techniques of Machine Safeguarding (O.S.H.A. Publication Number 3067).

This publication is available from: The Publication Office — O.S.H.A.

U.S. Department of Labor 200 Constitution Avenue, NW Washington, D.C. 20210

The general purpose point of operation shield provided with this machine and shown in certain illustrations throughout this manual may not be appropriate and cannot be utilized for all possible applications of the machine. Use additional or alternate safeguarding where this shield is not appropriate or cannot be utilized. Note that for purposes of display, the shield has been removed in certain other illustrations in this manual.