

Tool-Die J-31314



**OPERATOR'S
MANUAL**

JANUARY, 1957

***Bridgeport* MACHINES, INC.**

BRIDGEPORT, CONNECTICUT - U. S. A.

INDEX

	Page
Dimensional Drawing	1
Floor Plan	2
Long and Cross Feed Assembly	3
Uncrating	4
Shortages	4
Cleaning	4
Placing on Solid Foundation	4
Leveling Machines	4
Mounting Head on Overarm Adapter	5
Handles	5
Lubrication	5
Inspection	5
Alignment of Head	5
Lubrication Drawing	6
Adjustment of Table Gib	7
Adjustment of Saddle and Knee Gibs	7
Clamping Table, Saddle and Knee	8
Removing of Table	8
Removing of Saddle	8
Power Feed Attachment	9
Instructions for Installing Power Feed	9 & 10
Installation and Use of Measuring Attachment	11 & 12
Descriptive Photograph of Model "J" Attachment	13
Mounting Motor on Attachment	14
Placing and Adjusting Belts	14
Operating Instruction of "J" Attachment	14
Operating Instruction of "J" Attachment	15
Operating Instruction of "J" Attachment	16
Operating Instruction of "J" Attachment	17
General Speed Recommendations	18
Table of Cutting Speeds and Feeds	18
Parts Drawing on "J" Attachment	19
Parts List on "J" Attachment	20
Quill Housing Unit Parts List	21
Quill Unit Parts List (Serial "J" 1200)	22
Quill Unit Parts List (Serial J 1200 and Up)	23
V Belt Unit Parts List	24
Back Gear Transmission Unit Parts List	25
Quill Pinion and Overload Clutch Assembly Parts List	26
Feed Transmission Unit Parts List	27
No. 4 Belt Housing	28
Brake and Clutch Unit Parts List	29
Parts Drawing on BR Machine	30
Parts List on BR Machine	31
Parts List and List on Power Feed Attachments	32
Parts Drawing and List on Model "M" Attachments	33
Parts Drawing and List on Shaping Attachment	34
Parts Drawing and List on Cherrying Attachment	35
Parts Drawing and List on Model "R" Attachment	36
Parts List and Drawing on Model "C" Attachment	37